


# SR 200 Airline

## Spare parts and accessories

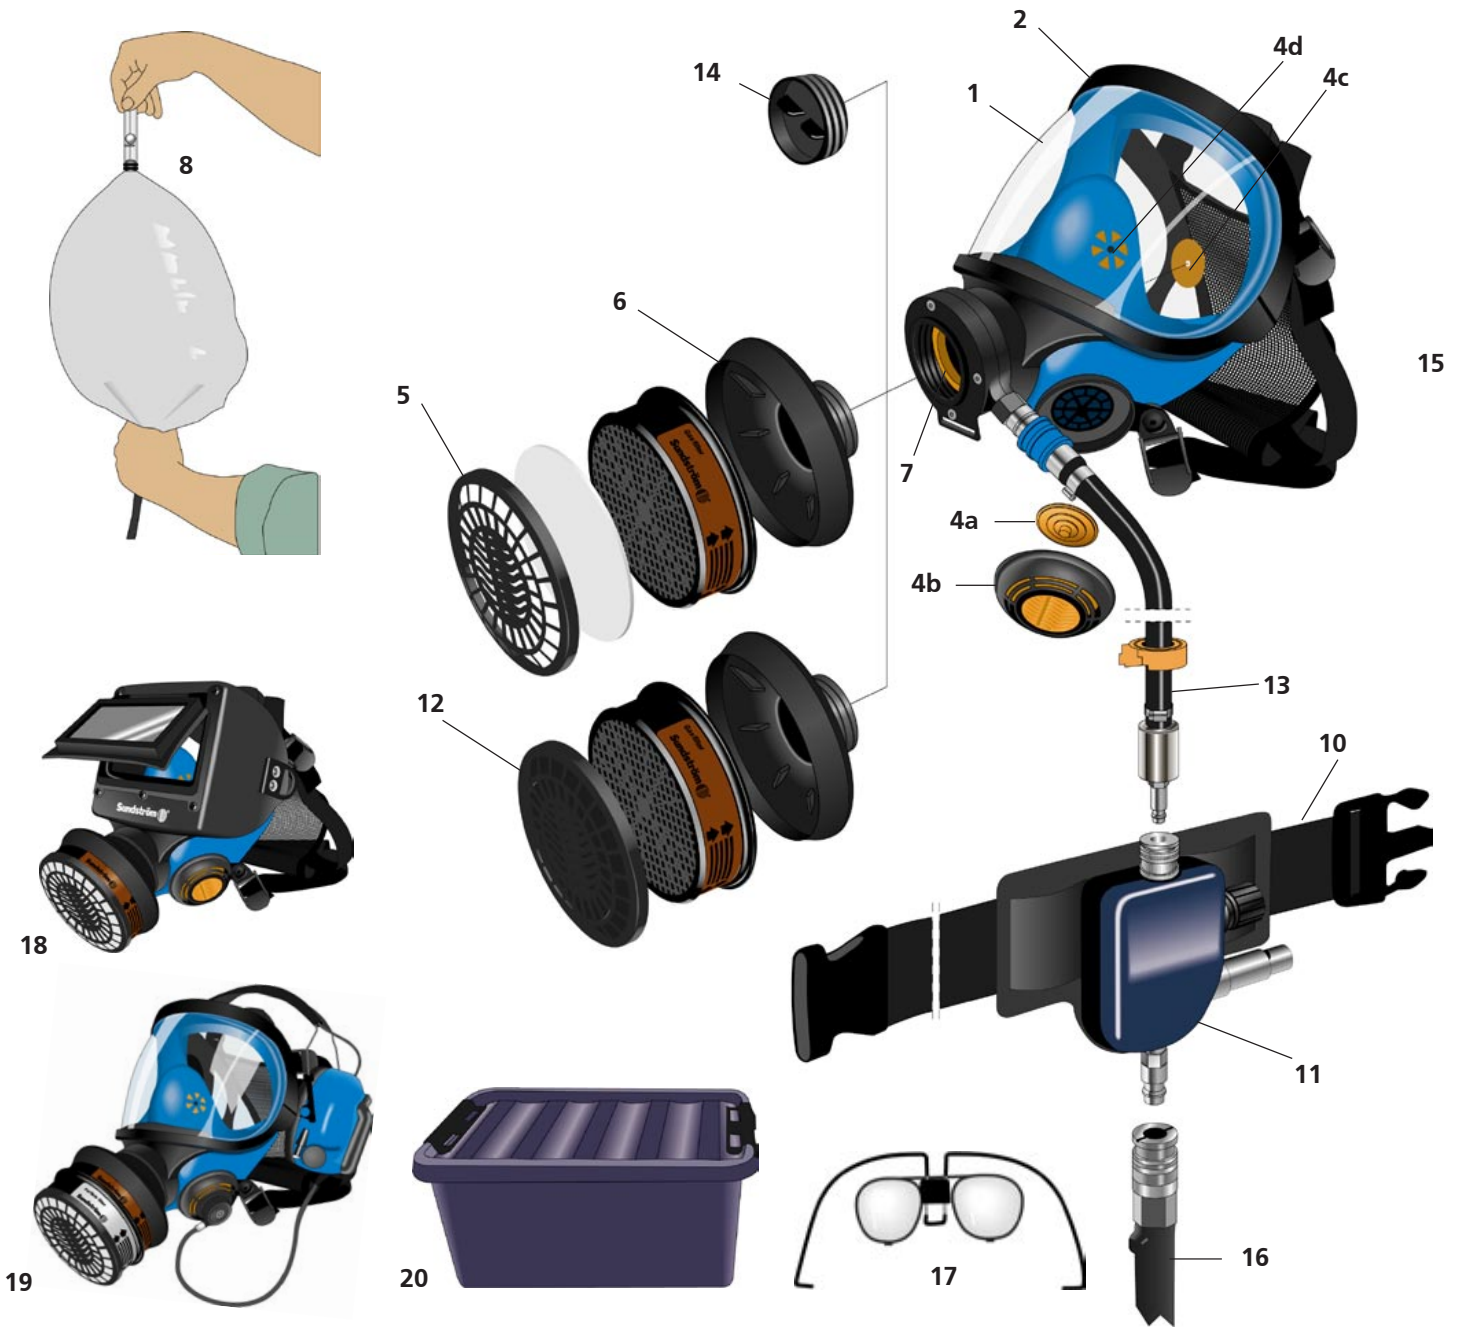

No	Part	Ordering No			
1.	Visor, polycarbonate	R01-1201	10.	Belt	R03-1510
	Visor, laminated glass	T01-1203	11.	SR 350 Control valve, Airline A	R03-1001
1.	Peel-offs, SR 343 for PC-visor	T01-1204	11.	SR 347 Control valve, Airline B	R03-1002
	Peel-offs, SR 353 for glass visor	T01-1205	12.	Sealing cover	R03-1406
2.	Upper frame half	R01-1202	13.	Breathing hose, Airline A	R03-1003
3.	Head harness, fabric	R01-1203	13.	Breathing hose, Airline B	R03-1004
	Head harness, rubber	T01-1215	14.	Sealing plug	R03-1005
	<b>Set of membranes</b>	<b>R01-1204</b>	15.	Airline A. without control valve and hose	R03-1006
	4a) Exhalation 2x	-	15.	Airline B. without control valve and hose	R03-1007
	4b) Valve cover 2x	-	16.	SR 358 Plastic hose 5/10/15/20 m	-
	4c) Inhalation 3x	-	16.	SR 359 Rubber hose 5/10/15/20 m	-
	4d) Dowel 2x	-	16.	SR 360 Spiral hose 2/4/6/8 m	-
5.	Pre-filter holder	R01-0604	17.	SR 341 Spectacle frame	T01-1201
6.	Filter adapter 280-3	H09-0212	18.	SR 84 Welding Cassette	T01-1212
7.	Seal	R01-1205	19.	SR 342 Microphone	T01-1213
8.	Flow meter	R03-0346	20.	SR 344 Storage box	T01-1214
9.	Carrier strap	R01-1206		SR 5226 Cleaning wipes, box of 50	H09-0401